


APTIV | VDR-to-ELD Install Guide

1 Connect ELD cable and antennas to VDR

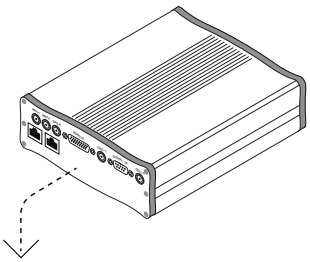


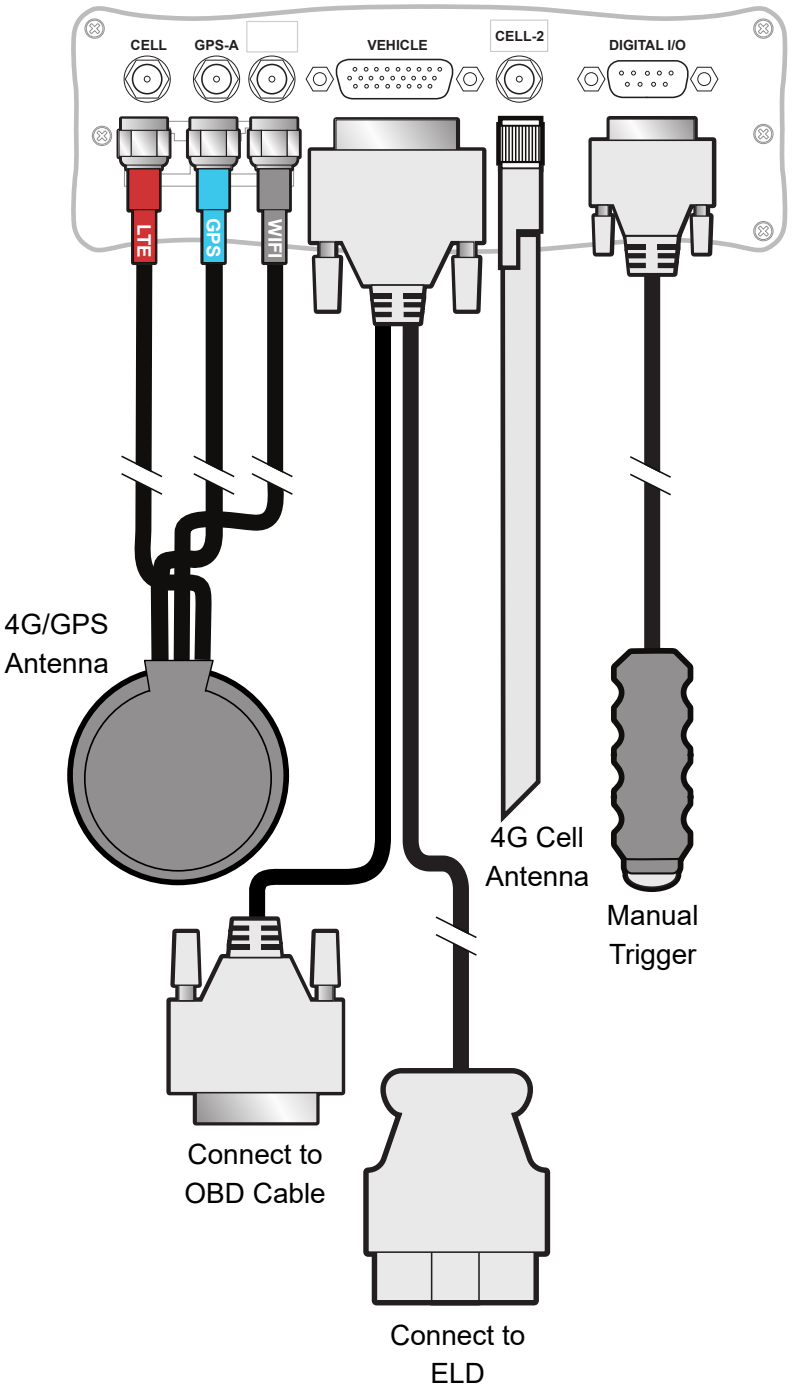

2 Connect ELD cable to standard OBD cable

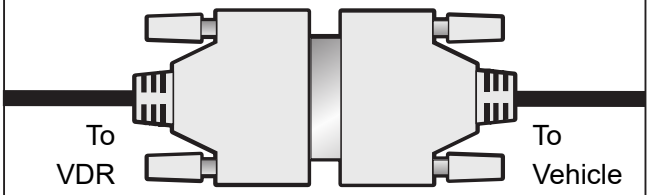

3 Connect VDR to vehicle and ELD

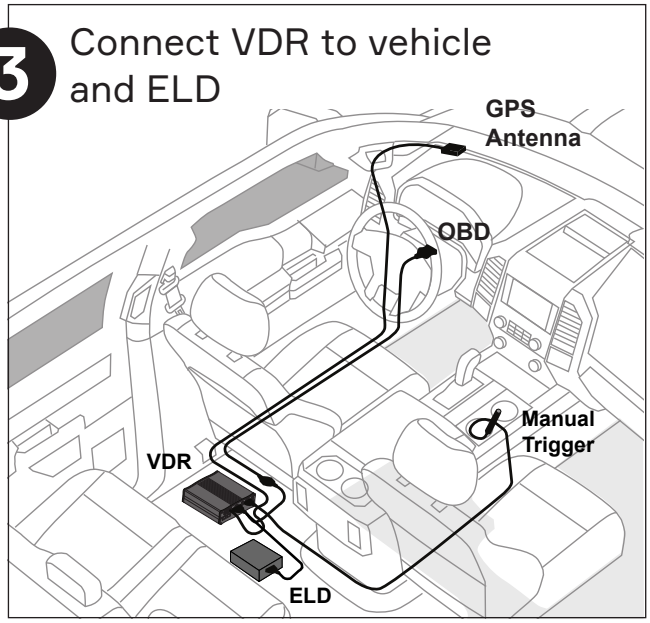

Important Information

- To use an electronic logging device (ELD) at the same time as your Aptiv EP-1000, you will need to order an ELD cable from Aptiv.
- The ELD will communicate with your VDR via channel 2, so **you will not be able to collect any signals on channel 2 while using your ELD**. Make sure you let your Aptiv representative know that you are using an ELD on the vehicle so that they can modify your data collection as necessary.
- If you attempt to connect the ELD and the VDR differently than shown here, your VDR and/or your ELD will likely not function properly.

Document Version 1.0 Copyright ©2022 Aptiv. All Rights Reserved.